



Neato Botvac D75 Brushes Replacement

This steps will help you take out the main brush of your device to clean it or replace it.

Written By: Juan Cornejo



INTRODUCTION




Hello! Today I will show you the steps that will help you take out the main brush of your device to clean it or replace it



TOOLS:




- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Brushes

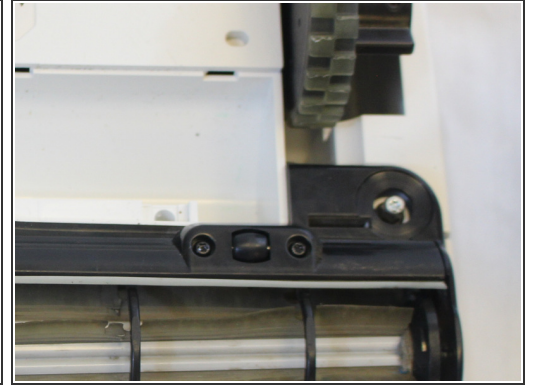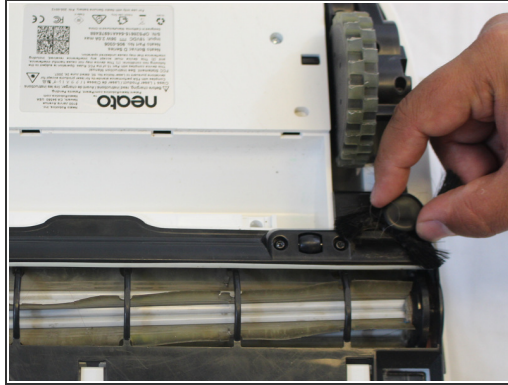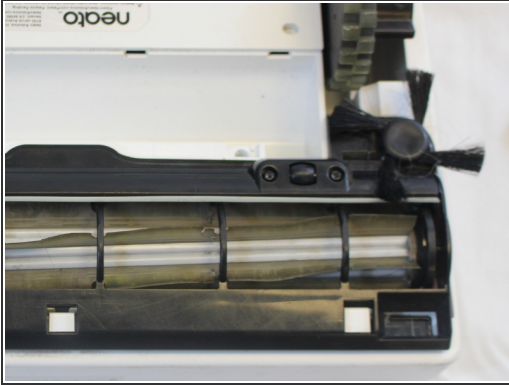

- To remove the rotary brush simply grasp it firmly and pull it off.


Step 2

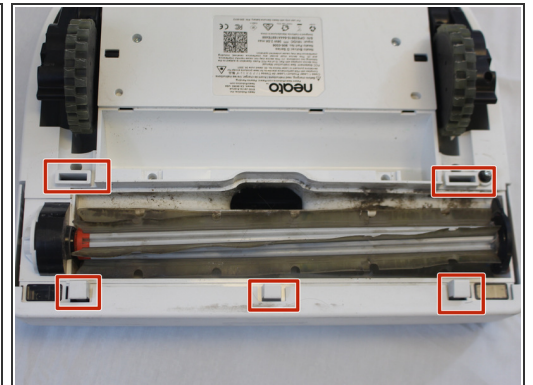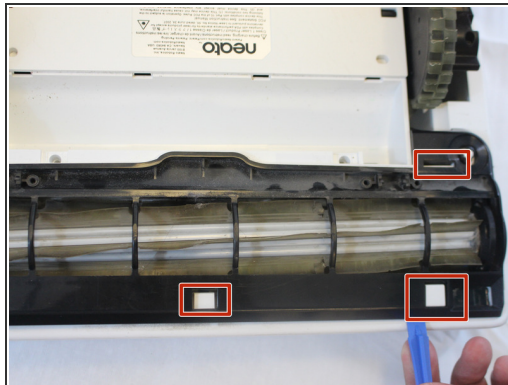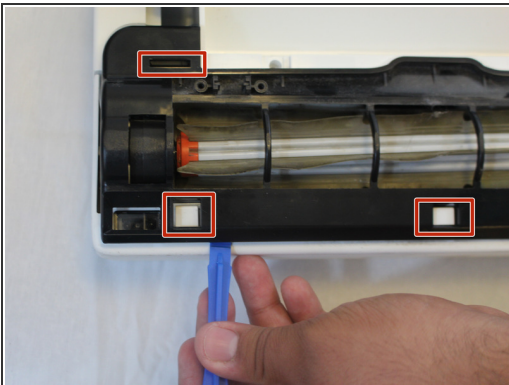

- Once you have everything out get the plastic opening tool and pry open the large black plastic piece.
- With a little force it should come out.

☞ The boxes show you where the clips are that hold this piece

Step 3

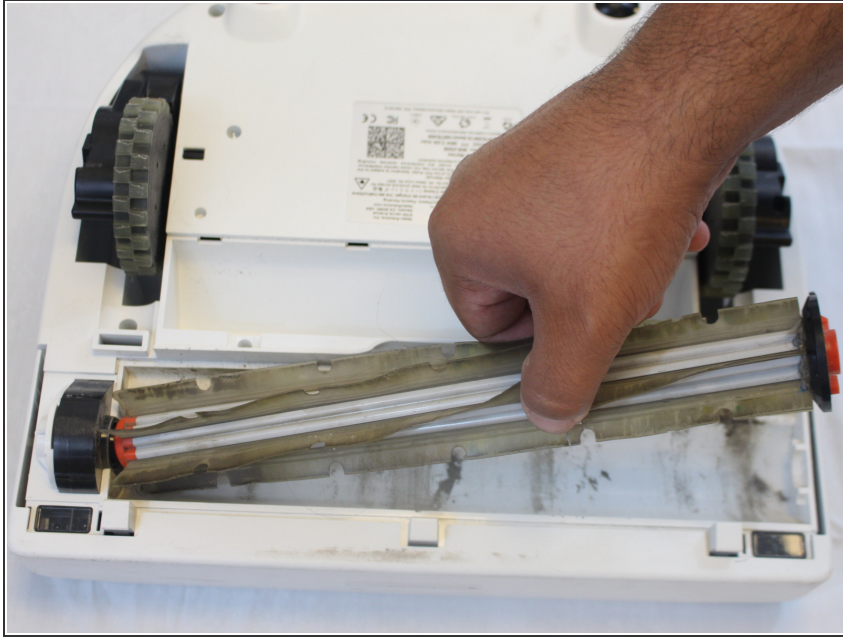

- Once the black piece has been taken out, the brush just comes out easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:45:04 AM.